

CONVEYOR AND PROCESS BELTS


TECHNICAL DATA SHEET

CODE	NA-1448	TYPE	2M5 U0-U2 W A XW-P
------	---------	------	--------------------

COMPOSITION		
Conveying surface	Material	Polyurethane (TPU)
	Thickness	0.20 mm 0.008 in.
	Surface pattern	Smooth
	Colour	White
	Coefficient of friction	MF
Textile carcass	Material	Polyester (PET)
	Plies no.	2
	Weft type	Rigid
Driving surface	Material	Fabric with polyurethane (TPU) impregnation
	Thickness	--- mm --- in.
	Surface pattern	Fabric
	Colour	Natural

TECHNICAL SPECIFICATIONS			
Total thickness		1.30 mm	0.05 in.
Weight		1.50 kg/m ²	0.31 lbs./sq.ft
Elongation at 1%		6 N/mm	34.0 lbs./in.
Max. admissible pull		12 N/mm	69.0 lbs./in.
Temperature resistance ⁽¹⁾	min.	-30 °C	-22 °F
	max.	110 °C	230 °F
⁽¹⁾ Use of the belt with limit values may reduce its life.			
Minimum radius / diameter ⁽²⁾			
■ Knife edge minimum radius		4 mm	0,16 in.
■ Bending roller min. diameter		8 mm	0.31 in.
■ Counter-bending roller min. diameter		16 mm	0.63 in.
⁽²⁾ The above mentioned values depend on the type of CHIORINO joint recommende			
Coefficient of friction on driving surface			
■ Raw steel sheet		0.20 [-]	
■ Laminated plastic/wood		0.25 [-]	
■ Steel roller		0.20 [-]	
■ Rubberized roller		0.30 [-]	
Max. production width		3500 mm	138 in.

SUITABLE FOR
Food: slicing machines
Food: seafood processing
Food: dairy
Food: bread
Food: biscuits and crackers: rotary cutter
Food: chocolate bars
Food: pizza
Pharmaceutics industry
Fruits and vegetables

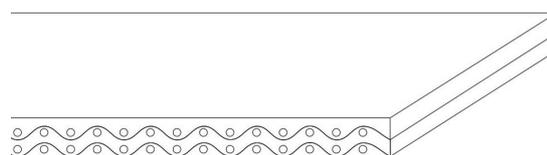

FEATURES	
Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	yes
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	no
Troughed conveying	no
Swan neck conveying	no
Inclined conveying	no
Accumulators belts	no
Curved conveyor	no
Chemical resistances link	12

COMPLIANCES	
REACH EC 1907/2006 Regulation and Amendments	
FDA (Food and Drug Administration)	


NOTES

Issue: 06-04-2018

Last Update: 03-12-2018

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.

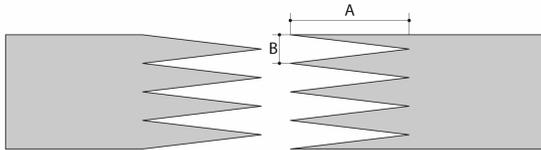CODE NA-1448
TYPE
2M5 U0-U2 W A XW-P
Recommended joining procedure
SINGLE Z

A = 80 mm
B = 10 mm
Other joining methods can be used:


 DIAGONAL SINGLE Z
 DOUBLE Z
 SKIVED JOINT '1'

Check our general catalogue to get further info on CHIORINO joining methods.

• Pressing
Heating press P \ PL \ PLS


Press settings	
Upper platen temperature	160 °C
Lower platen temperature	160 °C
Temperature gauge setting	155 °C
Curing time in press	3 min.
Pressure	3 bar
Film	TC-300 - HP W PU film
Cement	---

1. Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.

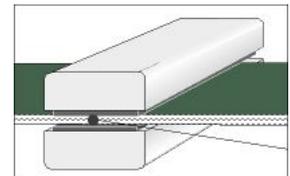

2. Allow the cooling cycle to be completed before removing the belt from the press.

3. A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side. A periodical inspection of the thermostats is recommended, to make sure they function correctly.

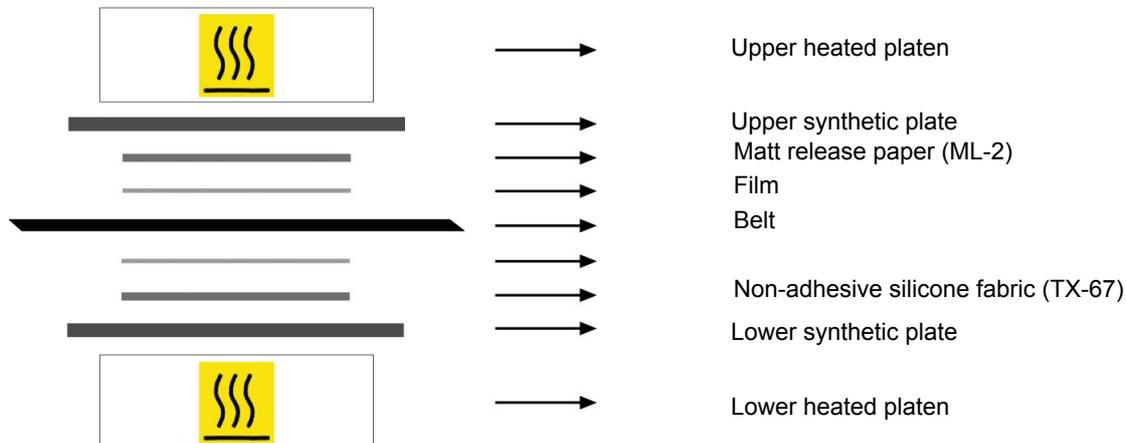• Layout of components

• Notes

Issued: 23-11-2018

Last Update: 23-11-2018

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.